


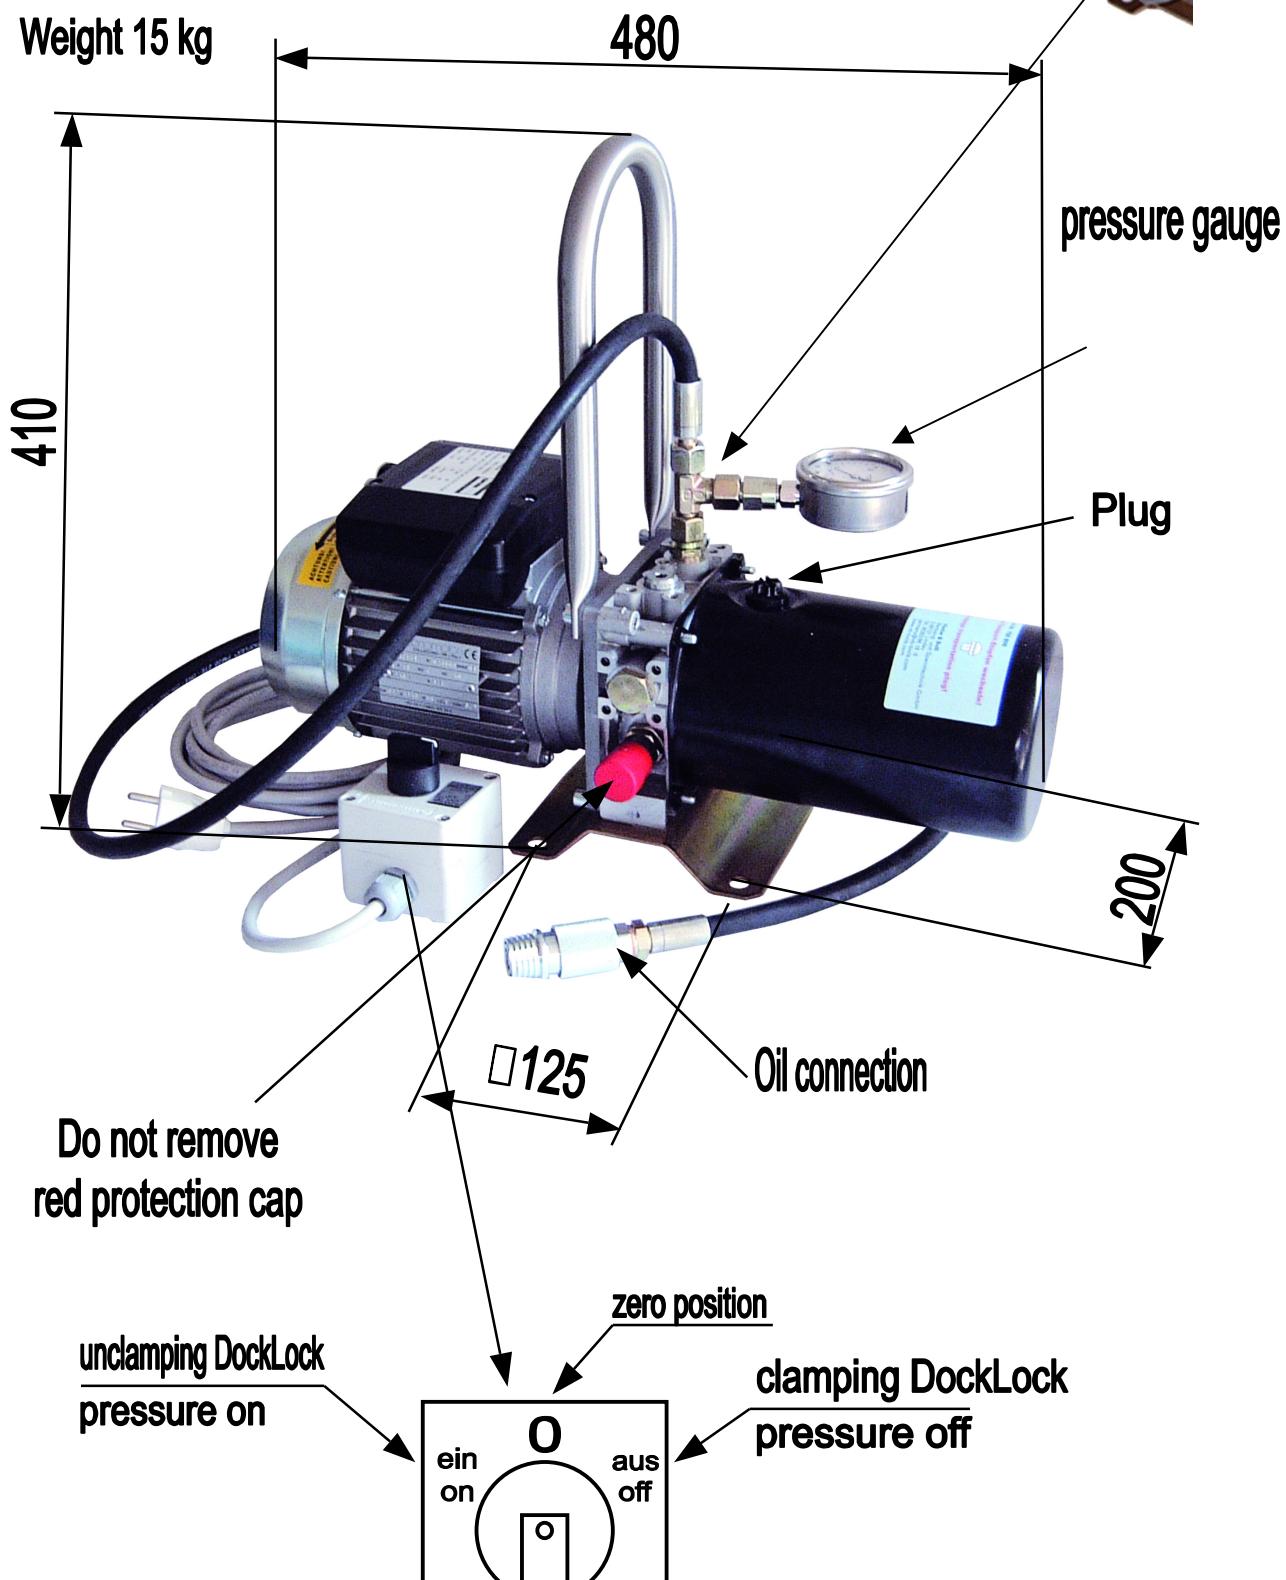

## Operating instruction pressure unit 758800-1

### On the rear side:

The knurled-screw must be turned in completely, then secured by the knurled disk.  
Unscrewing of this screw will release the oil pressure (current breakdown)





## 1. Basic safety instructions

- Electric connections and leads must be inspected regularly.
- Fill unit only over filter (filter finesse 10 - 20 µm)
- **Don't make any alterations nor add or convert anything at the unit without consulting manufacturer!**
- Use only original spare parts.
- Control hydraulic-tubes and connections.
- **Do not change operating pressure of max. 65 bar!**
- Oil connections and reservoir must be kept clean.

## 2. Transport Instructions

- **Transportation only in original package.**
- For transportation mount the transportation plug and demount handle.

## 3. Instructions for 1<sup>st</sup> start up

- Check voltage.
- Visual inspection for transport damage and dirt etc.
- **Install the enclosed exhaust-plug.**
- Check and if necessary tighten all screw connections.

## 4. Pressure Fluids

The hydraulic fluid must indicate a quality after ISO-VG 32 - 46 (32-46 mm<sup>2</sup>/s at 40°).

## 5. Inspections- and maintenance work

INTERVALL	inspection	refill	tighten	replace
Daily / 8h	pressure			
	temperature			
	Oil level ⇒	in case of need		
	noise rating			
monthly / 200h	leakage ⇒		in case of need ⇒	sealings
yearly / 1500 h		oil exchange	all screwed con..	suction filter* clean or replace

\*See picture on page 3



## 5.1 Maintenance

### Inspection

Please contact manufacturer if there are changes in sound, vibrations on motor or pump or nominal data's.

### Refill

When topping-up or changing hydraulic oil ensure prescribed quality. Refilling and filling only over filter (10 - 20 µm).

Oil exchange: Disconnect from power, empty oil completely. Clean tank.  
Do not use wool to clean tank!

### Replace

**Unit components must be changed by technically trained personnel only.**

**Use only original spare parts**

### Sectional view of pressure unit

